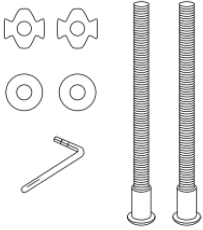
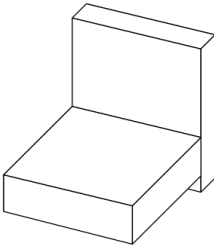
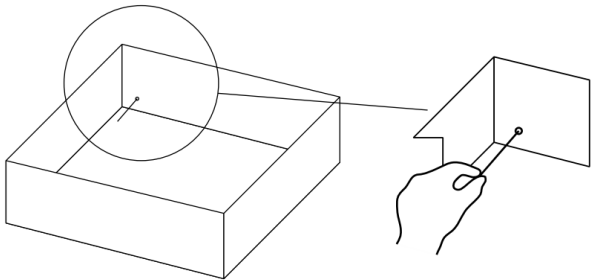
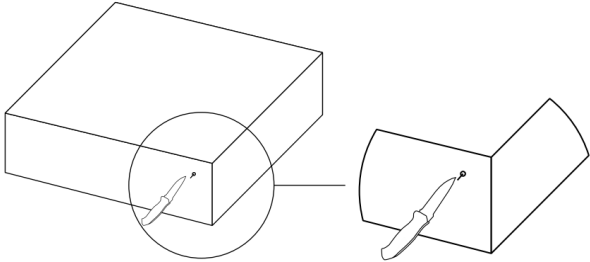
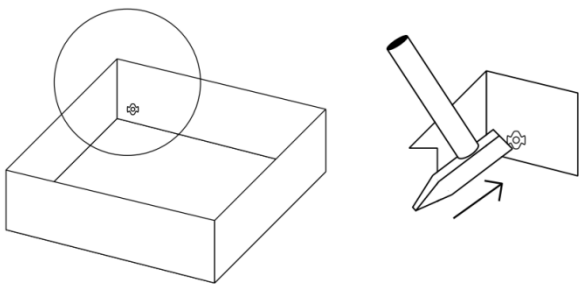
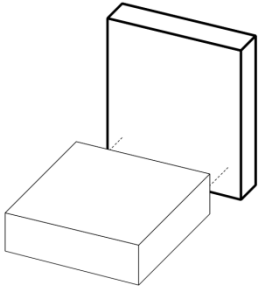
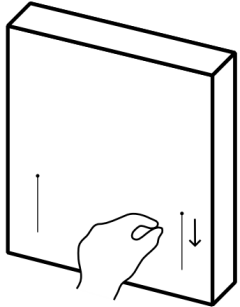
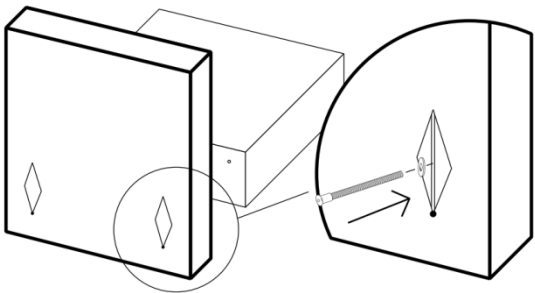
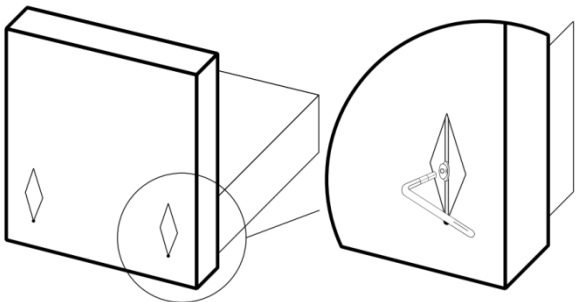
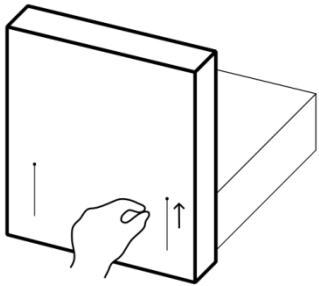


HEADBOARD FIXING INSTRUCTION

 Connector set	 Frame, mattress and headboard
1. Mark with sharp object through the hole it's position on the outer side of the frame 	2. Make with sharp tool small cuts to fabric for the bolts 
3. Insert T-nuts into the holes on the inner side of the frame 	4. Align headboard with the frame, mattress 
5. Open zippers on the headboard 	6. Insert bolts with washers through opening from headboard side 
7. Tension bolts with hexagon wrench 	8. Close zippers 
Done!	